


SPRT®

Thermal Receipt Printer User's Manual SP-RME5A

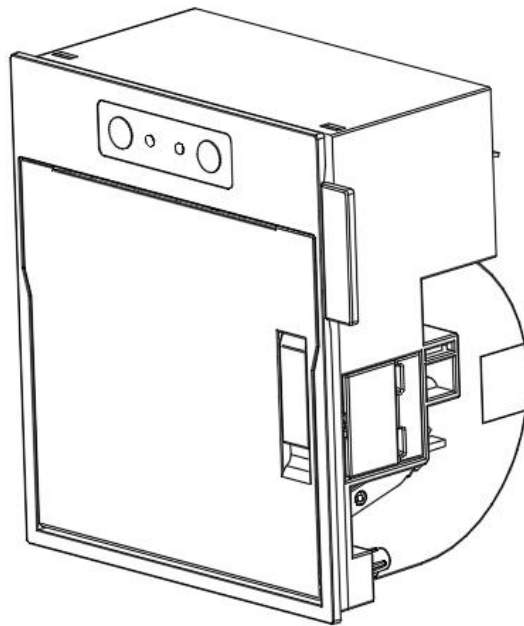

(Ver 1.01)

Beijing Spirit Technology Development Co.,Ltd.

www.sprt-printer.com

Content

| | |
|--|----|
| Introduction..... | 1 |
| Chapter 1 Feature and Performance..... | 1 |
| 1.1 Print Performance..... | 1 |
| 1.2 Print Paper..... | 1 |
| 1.3 Print Font..... | 1 |
| 1.4 Interface..... | 2 |
| 1.5 Print Control Commands..... | 2 |
| 1.6 Power Supply..... | 2 |
| 1.7 Operation Environment..... | 2 |
| 1.8 Outline Dimension..... | 2 |
| Chapter 2 Operation Specification..... | 4 |
| 2.1 Printer Appearance..... | 4 |
| 2.2 Installation of the printer..... | 4 |
| 2.3 Paper Installation..... | 5 |
| 2.3.1 Paper Loading..... | 5 |
| 2.4 Interface..... | 6 |
| 2.4.1 USB Interface..... | 6 |
| 2.4.2 Power Connection..... | 7 |
| 2.4.3 Parallel interface connection..... | |
| 2.4.4 Serial interface connection..... | 8 |
| 2.4.5 Cash Drawer Interface..... | 10 |
| 2.5 Indicators,buzzer, buttons and lock..... | 10 |
| 2.6 Turn on the printer..... | 12 |
| 2.7 Self test..... | 12 |
| 2.8 Hexadecimal Printing..... | 13 |
| 2.9 Setup of printer parameter..... | 13 |
| 2.10 Entering program upgrading mode..... | 13 |
| APPENDIX A: Parameters Setting..... | 14 |

Introduction

SP-RME5A printer is a new type line thermal printer, which features in fast speed print, low print noise, high reliability, perfect print quality and ribbon needless, avoiding the vexation of regular maintenance.

Chapter 1 Feature and Performance

1.1 Print Performance

- Print method: direct thermal
- Print paper width: 79.5±0.5mm
- Print density: 8 dots/mm, 576 dots/line
- Print speed: max 170mm / sec.
- Reliability
 - (1) Print head life: 100km
 - Using condition:
 - * Print 12 × 24 ANK characters, print 50 lines each time, intermittent print repeatedly
 - * Use specified thermal paper
 - (2) Cutter life: 1000,000 cuts. Conditions of use: less than 30 times per minute.
- Using condition: less than 30 cuts/minute
- Valid print width: 72mm

1.2 Print Paper

- Thermal paper roll model: TF50KS—E (Japan paper co.ltd)
AF50KS-E (JUJO THERMAL)
- Thermal paper roll: Width——— 79.5±0.5mm
 - Outer Diameter —— 80mm (max.)
 - Inner Diameter——— 13mm±0.5 (min.)
 - Thickness —— 0.06mm~0.08mm

1.3 Print Font

- ANK Character Set
- 12×24 dots, 1.5 (W) ×3.00 (H) mm
- GB18030(Chinese):

24×24 dots, 3.00 (W) ×3.00 (H) mm.

1.4 Interface

- USB Interface:
PH4 interface(SP-RME5APUF)
USB TO MINI 5P(SP-RME5ASUF)
- Parallel interface(SP-RME5APUF):
IDC 26-pin socket
- Serial Interface(SP-RME5ASUF):
IDC10 straight pin socket.
- Cash drawer control
DC12V, 1A, 2.54 PDK-2PIN socket (support 20V cash drawer)

1.5 Print Control Commands

- Character print commands: support double-width, double height print of ANK characters, user-defined characters and Chinese characters, the character line spacing is adjustable.
- Graphics print commands: support the print of bit-map graphics and download bit-map graphics with different density
- GS bar code print commands: support UPC-A, UPC-E, EAN-13, EAN-8, CODE39, ITF, CODEBAR, CODE93, CODE128,PDF417, QR code, DATA Matrix bar code print.

1.6 Power Supply

- SP-RME5APUF:DC12V±10%, 4A, 5557-2*2P (4.2mm pitch) power socket
- SP-RME5ASUF: DC24V±10%, 2A, 2114S-02 power socket.

1.7 Operation Environment

- Operation temperature: 0~50℃; Operation humidity: 10~80%
- Storage temperature: -20~60℃; Storage humidity: 10~90℃

1.8 Outline Dimension

Installation size: 111.5mm×128.5mm(W×H)

Depth: 84.2mm


Outline dimension:

125.5mm×132mm×86.7mm(W×H×D) no lock(standard configuration)


125.5mm×132mm×89.7mm(W×H×D) with lock(optional configuration)

Please check outline dimension in the below picture 1-1:

The SP-RME5APUF model is shown as follows:

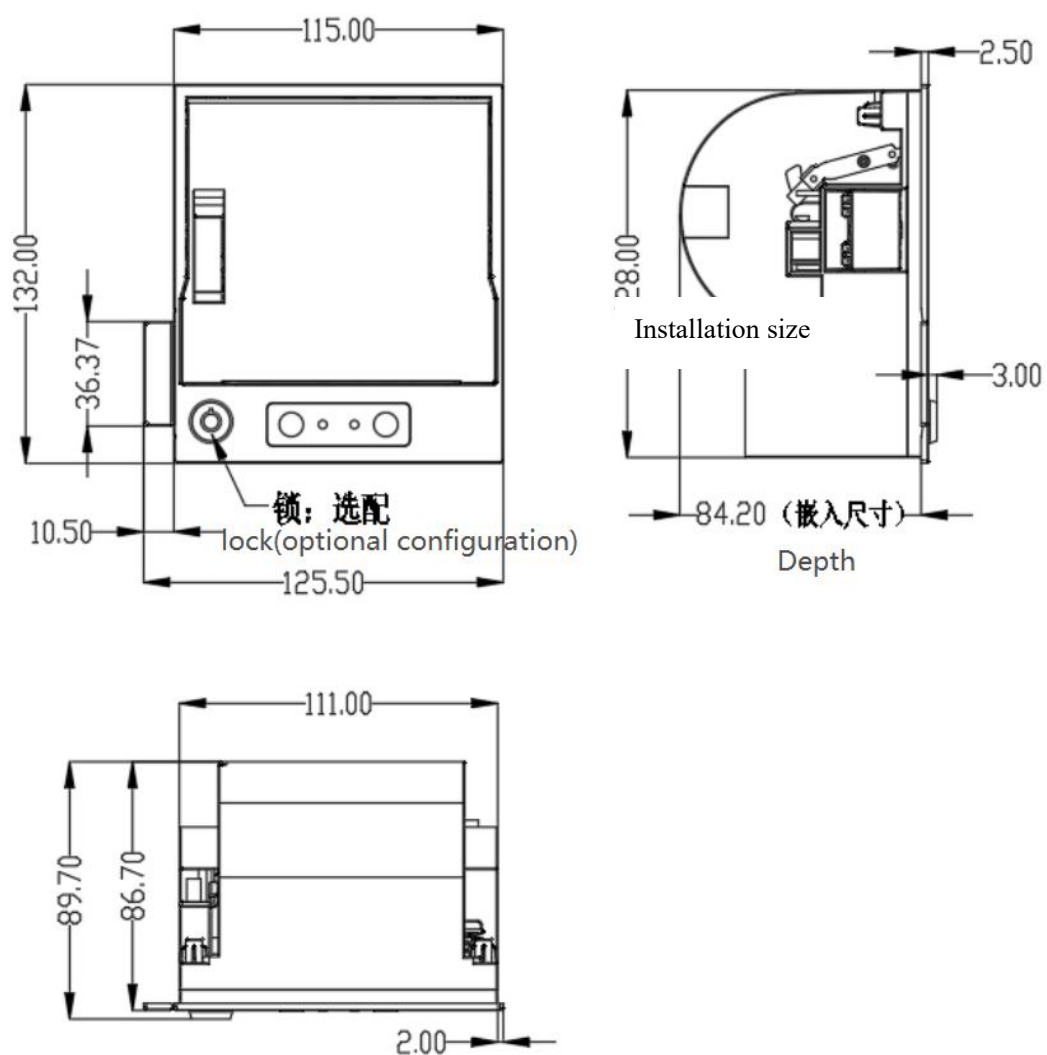


The SP-RME5ASUF model is shown as follows:

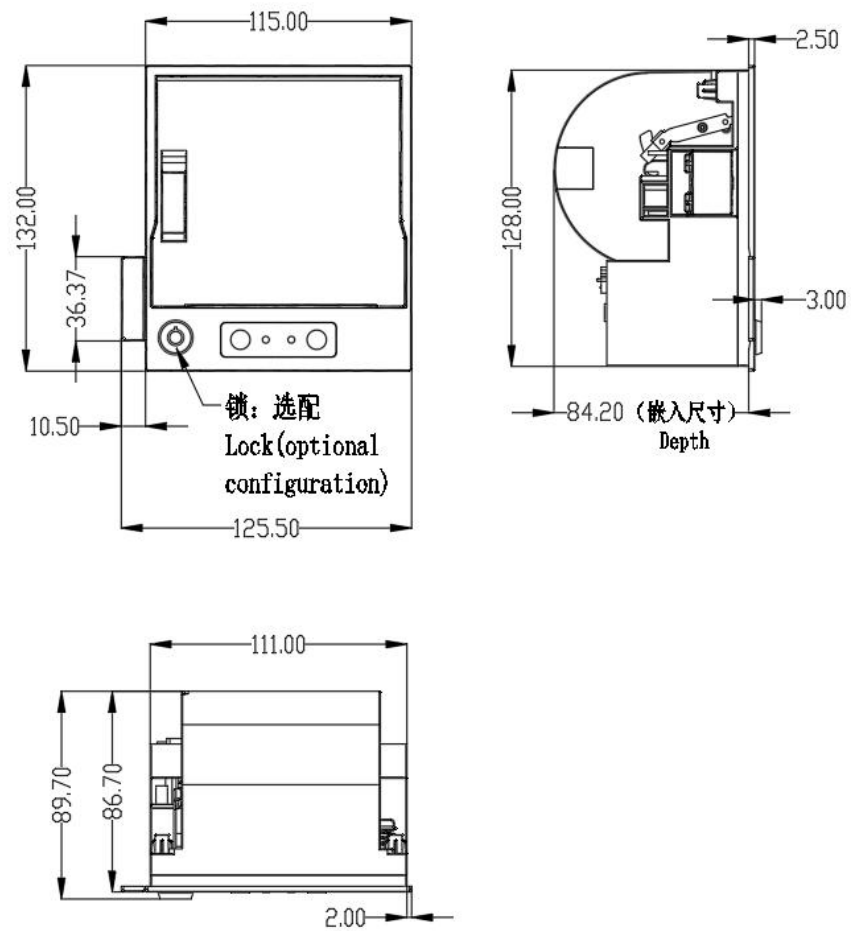


Chapter 2 Operation Specification

2.1 Printer Appearance


About the name of each part of printer, please refer to picture 2-1:

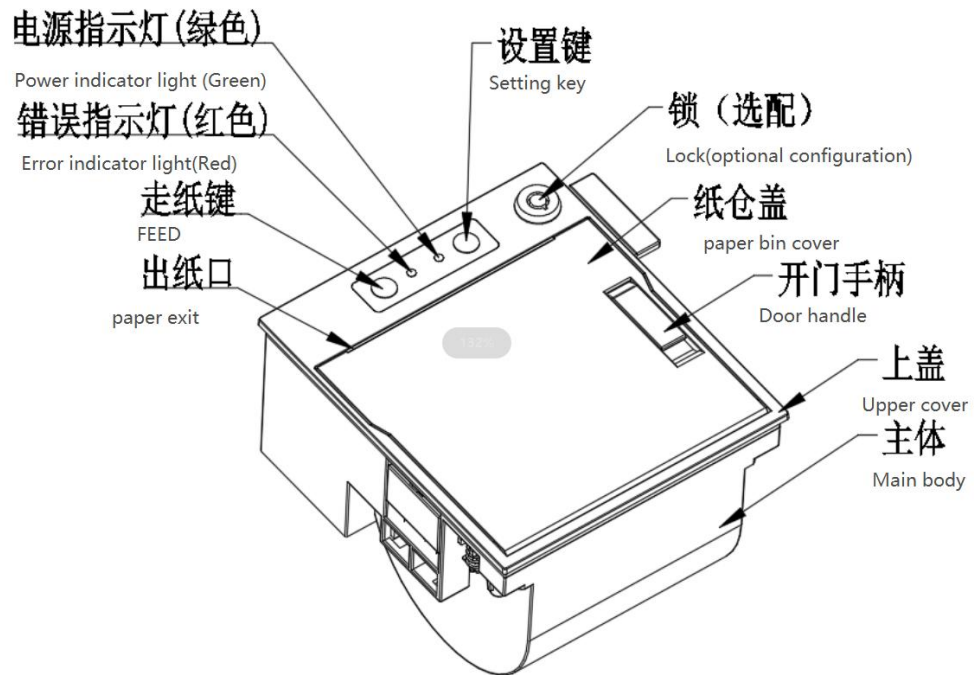

The SP-RME5APUF model interface is shown below:

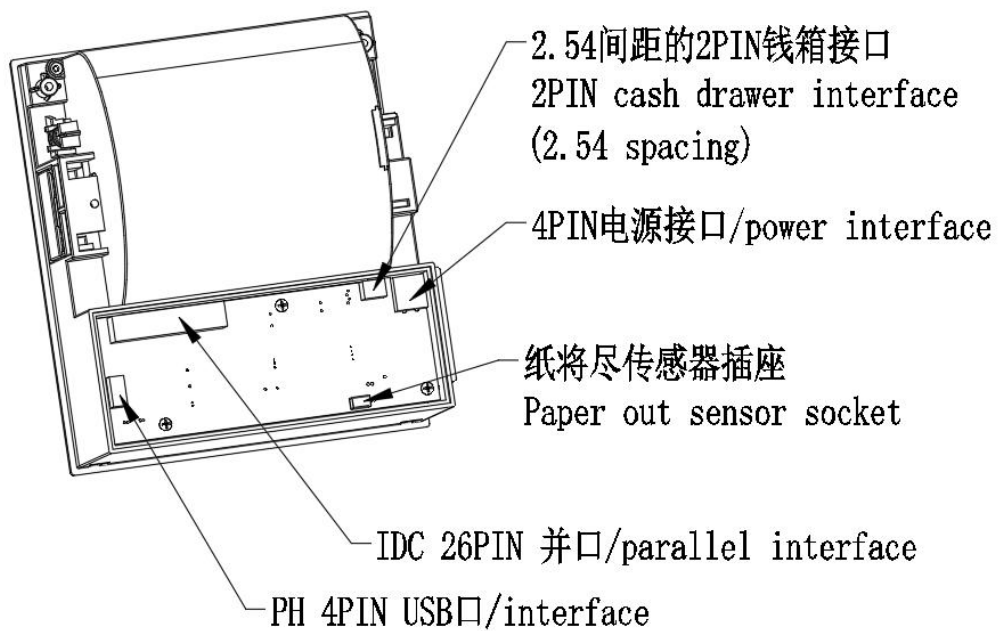

The SP-RME5APUF model interface is shown below:

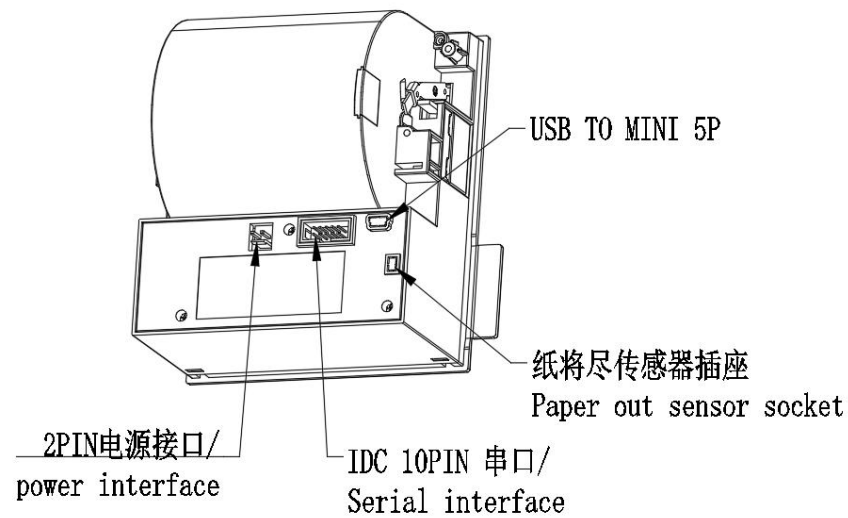

2.2 Installation of the printer

Embedded printer in the installing hole of customer's panel. open the printer paper cover, clockwise to tighten the two screws to complete the installation of the printer . Print installation shown in Figure 2-2.

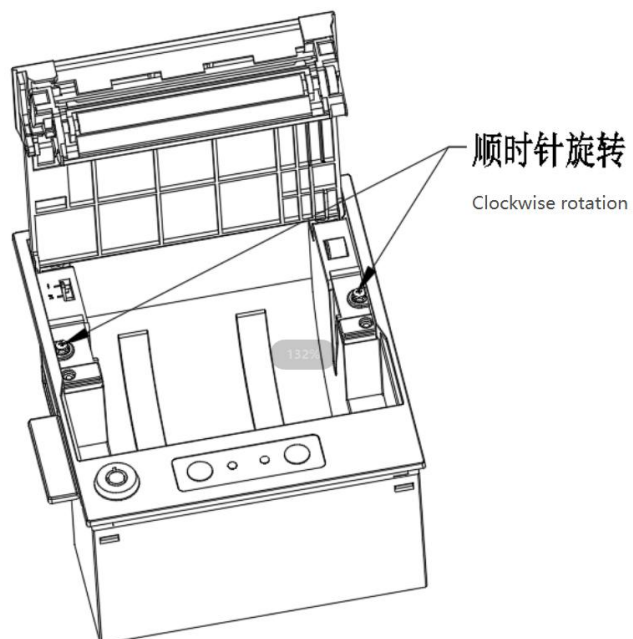


Fig. 2-2


2.3 Paper Installation

2.3.1 Paper Loading

SP-RME5A adopts 79.5mm±0.5mm width thermal paper roll.

Steps of Loading Thermal Paper are as below:

Hold down the upper cover button on the left side, open the movable upper cover, draw a certain length of the paper roll, put the paper end on the print head, close the upper cover and press it downwards lightly.

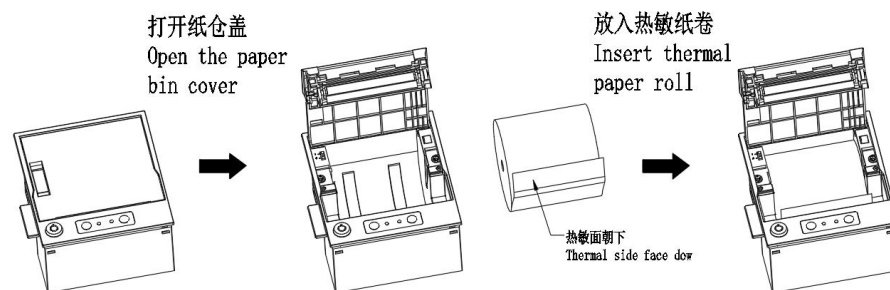


! Caution!

1. Pay attention to the direction of loading paper, make the printing surface face to the print head.
2. Please don't feed or draw the paper forwards or backwards with hands.
3. Keep clean of the print head, to avoid affecting the printing quality.

2.4 Interface

2.4.1 USB interface


The USB interface of the SP-RME5APUF printer is PH-4A interface, outer appearance and pin assignment is shown in Figure 2-5:

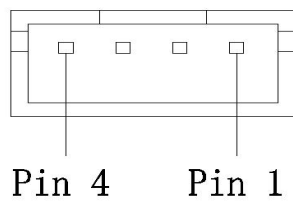

| PIN Assignment | Function | Reference |
|----------------|----------|------------|
| 1 | GND | Ground |
| 2 | Data+ | Data + |
| 3 | Data- | Data - |
| 4 | V BUS | Power + 5V |

Figure 2-5: Mini-USB socket and pin definitions

The USB interface of the SP-RME5ASUF printer is is Mini-USB interface, outer appearance and pin assignment is shown in Figure 2-6:

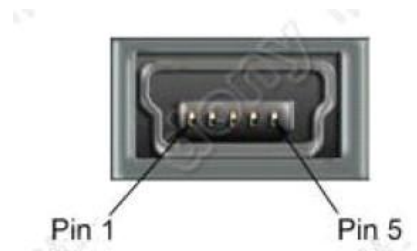


| PIN Assignment | Function | Reference |
|----------------|----------|------------|
| 1 | V BUS | Power + 5V |
| 2 | Data+ | Data + |
| 3 | Data- | Data - |
| 4 | | Blank |
| 5 | GND | Ground |

Figure 2-6: Mini-USB socket and pin definitions

2.4.2 Power Connection

SP-RME5APUF thermal printer external for 12V \pm 10%、4A power supply, 5557-2*2P (4.2mm pitch) power socket, as Fig. 2-7 shows:

5557-2*2P

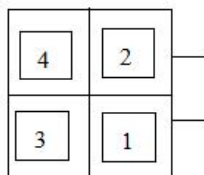

| PIN | Signal |
|-----|--------|
| 1,2 | 12V |
| 3,4 | Ground |

2.7 Power socket and PIN definition

SP-RME5ASUF thermal printer external for 24V \pm 10%、2A power supply, 2114S-02 power socket, as Fig. 2-8 shows:

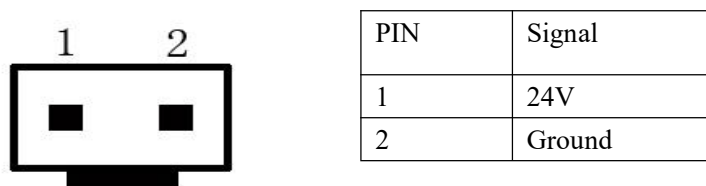


Fig.2-8: Power Socket

2.4.3 Parallel interface connection

The SP-RME5A thermal printer serial interface is compatible with RS-232C and supports DTR/DSR and XON/XOFF handshaking protocols, and its interface socket is an IDC10 socket, and the pin numbers of the serial interface socket are shown in Figure 2-9:

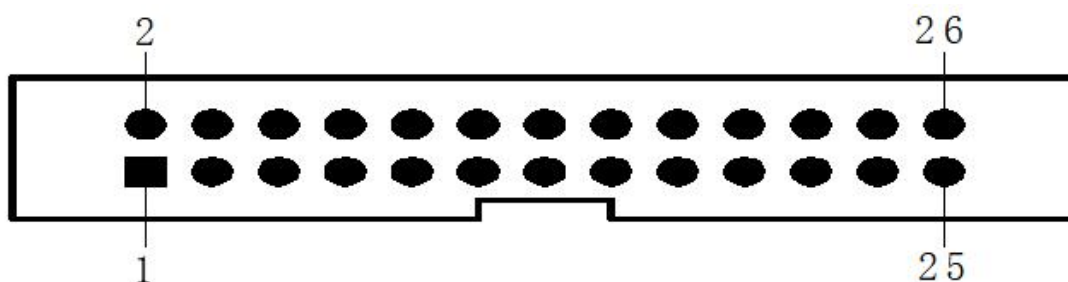


Figure 2-9 Serial Interface Socket Pin Numbers

The parallel interface pin signals are defined as shown in Table 2-10:

| Pin No. | Signal | Direction | Explanation |
|---------|--------|-----------|---|
| 1 | /STB | in | Strobe pulse to latch date reading occurs at rising edge. |

| | | | |
|---|-------|-----|--|
| 3 | DATA1 | In | These signals represent the 1st bit 8th bit of the parallel data representative ,each signal is at HIGH level when data is logic1,and LOW when data is logic 0 |
| 5 | DATA2 | In | |
| 7 | DATA3 | In | |
| 9 | DATA4 | In | |
| 11 | DATA5 | In | |
| 13 | DATA6 | In | |
| 15 | DATA7 | In | |
| 17 | DATA8 | In | |
| 19 | /ACK | Out | Answering pulse ,LOW level signal indicated that data have already been received and the printer gets ready to receive the next data |
| 21 | BUSY | OUT | HIGH level signal indicates that the printer is BUSY and can not receive data . |
| 23 | /PE | OUT | HIGH means printer is out of paper ; LOW means there is paper . |
| 25 | SEL | --- | It is raised to "HIGH" level through electric resistance and means the printer is ONLINE . |
| 4 | /ERR | OUT | HIGH means trouble free |
| 2、 6、 8 | NC | --- | Unconnected |
| 10、 12、 14、 16、 18、 20、 22、 24 | GND | --- | Ground-connected .The logic is "0" level . |

Figure 2-10 The PIN definition of parallel interface

Note: ① "in" means sending into the printer. Out means sending out from printer.

② The logic electrical level if signal is TTL electrical level .

2.4.4 Serial interface connection

The serial interface of model SP-RME5ASUF thermal printer is compatible with RS-232C and supports DTR/DSR and XON/XOFF handshaking protocols, and its interface socket is an IDC10

socket, and the pin numbers of the serial interface socket are shown in Figure 2-11:

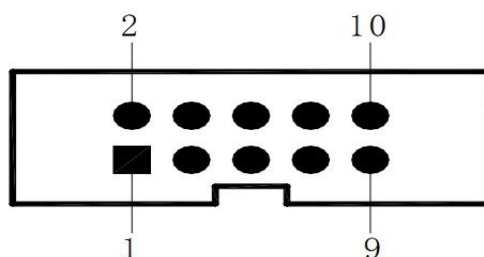


Figure 2-11 PIN NO.of serial interface

The definition of the signals of each pin of the serial interface is shown in Table 2-12:

| PIN NO. | Signal | Direction | Source | Description |
|---------|--------|-----------|---------|--|
| 2 | DTR | Output | Printer | Signal "MARK" means the host is busy and can not receive data. Signal "SPACE" means the host is ready to receive data. |
| 3 | TXD | Output | Printer | Printer transmits control code X-ON/X-OFF and data to host |
| 4 | DSR | Input | Host | Signal "MARK" means the host is busy and can not receive data. Signal "SPACE" means the host is ready to receive data. |
| 5 | RXD | Input | Host | Printer receives data from host |
| 6 | RTS | Output | Printer | Same with Pin No.2 DTR Signal |
| 9 | GND | ----- | ----- | Signal Ground |

Figure 2-12 The PIN definition of serial interface

Note: ① "Source" denotes the source that signal come from 3
 ② Logical signal level is EIA.

The baud rate and data structure in serial interface mode is 9600bps, 8-bit data bits, no parity bit and 1 stop bit. The serial interface of SP-RME5A can be connected to standard RS-232C interface. When it is connected to IBM PC or its compatible machine, connection can accord to Fig.2-13.


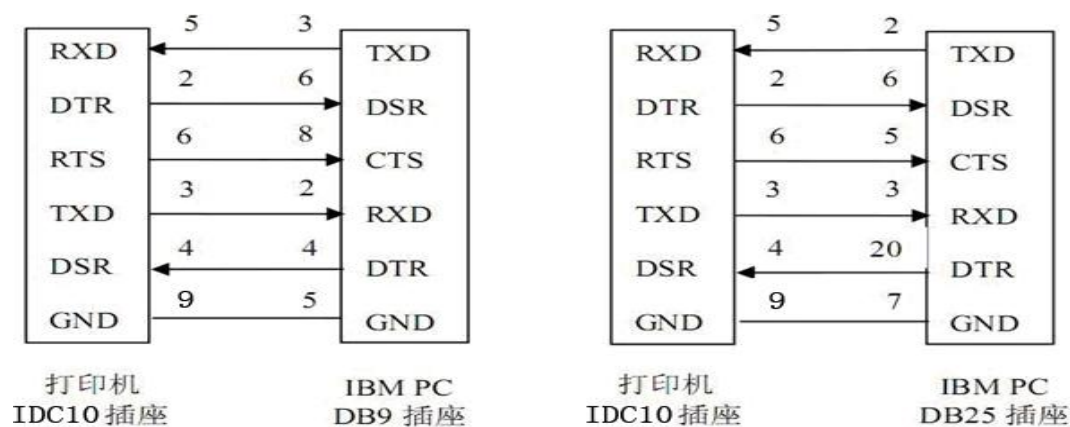


Figure 2-13 Schematic diagram of the serial interface of the printer and the serial interface of the PC

2.4.5 Cash Drawer Interface

The cash drawer interface of SP-RME5APUF printer is 2.54-2PIN socket as below:

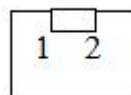

| PIN | Signal | Direction |
|-----|---------------------|-----------|
| 1 | +12VDC | - |
| 2 | Cash drawer driver- | Out |

2.5 Indicators, buzzer, buttons and lock

There are two buttons and two indicators for RME5A.

Note: The following descriptions of the buzzer, buttons and locks are only for devices with their optional features.

【SET】 is setting button, 【SET】 is used for setting some simple parameters of the printer.

【FEED】 is paper feeding button, Print command can be used to enable or disable the button switch function, in the allowed button control state, press 【FEED】 button, the printer will feed paper, loose 【FEED】 button, then stop.

The lock it used to lock button and paper cover, When the printer is locked, the paper cover will be opened normally, and all the button will not be operated;

The buzzer can indicate the error and cutter status. Through parameters setting, the buzzer can be set into error alarm, paper-cut indicating or both above. The types of error status are same as ERROR indicator.

The green POWER light is the power indicator. POWER indicator lighting means the printer is power on.



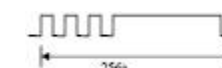



The red ERROR light is error status indicator. It is off when the printer works normally; while it flashes or persistently lights when the printer has abnormal alarm. If ERROR indicator flashes or persistent lights and the buzzer sounds, it means the printer has error.

According to different flashing types, the different errors of printer are indicated:


1. Unrecoverable error: the times of indicator flashing and buzzer sound indicate the error type, then indicator persistently light.
2. Recoverable error: the times of indicator flashing and buzzer sound indicate the error type, then indicator is persistently off.
3. Automatically recoverable error: the indicator flashes and the buzzer sounds continuously.
4. Paper out: the indicator lights and the buzzer sounds persistently.

The details are as below:

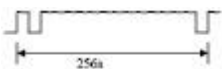① Unrecoverable error, the indicator flashes several times, then persistently lights. Then cycle. The times of flashing means the error type.

| Error type | Description | Types of ERROR flashing |
|---------------------|---|---|
| Unrecoverable error | LED flashes once : Memory read - write errors |  |
| | LED flashes twice: Over-voltage |  |
| | LED flashes three times: the voltage is lack |  |
| | LED flashes four times : CPU Execution error (wrong address) |  |
| | LED flashes five times : UIB error |  |
| | LED flashes eight times : temperature detection of circuit is wrong |  |

② Automatically recoverable error: the indicator flashes continuously.

| Error type | Description | Type of flash |
|---------------------------|--|---|
| Automatically recoverable | LED continues flashing : the temperature of printing head is |  |

| | | |
|-------|----------------------------------|--|
| error | over high and the cover is wrong | |
|-------|----------------------------------|--|

2.6 Turn on the printer

When the printer is off and paper case cover is closed, press the POWER button to turn on the printer and the ERROR indicator flashes twice, then indicator off. The printer enters into the normal working mode.

2.7 Self test

The self-test will check the condition of printer, if the printer prints out the self-test receipt correctly, it means the printer works normally except interface with host. Otherwise it needs to repair.

Self-test method: In the off state, [paper cover] closes and ensures that the printer has paper, press and hold the [FEED] button and turn on the power.

At this time, the red indicator will flash at the frequency of 1s flashing, and the [FEED] button will be released within 3 times of the indicator flashing.

The printer will prints a self-check receipt. Self-test can detect whether the printer is working properly, if it can print out the self-test spline correctly, then means except for the interface with the host, the printer is all normal, otherwise it needs to be overhaul.

2.8 Hexadecimal Printing

Turn on the printer according to the step below, it will enter the mode of Hexadecimal Printing:

In the off state, when the [paper cover] is open, press and hold the [FEED] button, power on, close the paper cover

The printer will print out 3 lines as below:

Hexadecimal Dump

To terminate hexadecimal dump,

Press FEED button three times.

This means the printer has entered hexadecimal printing mode, and under this mode, all of the input will be printed out as hexadecimal number. Paper will feed one

line with single-click of “FEED” button, after 3 times, it will print out “*** Completed ***”, and exit hexadecimal printing mode.

2.9 Setup of printer parameter

This function is for the setup of parameters.

Steps for setting parameters: Power off, press【SET】button and power on, release 【SET】after error indicator light flickers, press 【FEED】 twice, press 【SET】once again, printer will enter into parameter setup mode. Printer will print the first parameter which can be set and its current setup; Details can be checked on attached Appendix A.

Steps for exiting of parameter setup: Press 【SET】 button and 【FEED】 button at the same time to save the setup of parameter and exit, the printer will enter into normal mode.

If power off directly, parameters will not be saved.

2.10 Entering program upgrading mode


When printer powers off, press 【FEED】 and 【SET】 buttons, power on and release the buttons. Printer will enter into upgrading mode, status indicator light will flicker every one second.

APPENDIX A: Parameters Setting


This appendix is the method of setting default parameters of printer by buttons.

Setting instruction: Using 【SET】 button to choose setting item. Pressing this button once, the setting item will go to the next and also print out the current value of this item. Using 【FEED】 button to choose the setting value of item. Press the button once, the setting value will go to the next.


Summary setting:

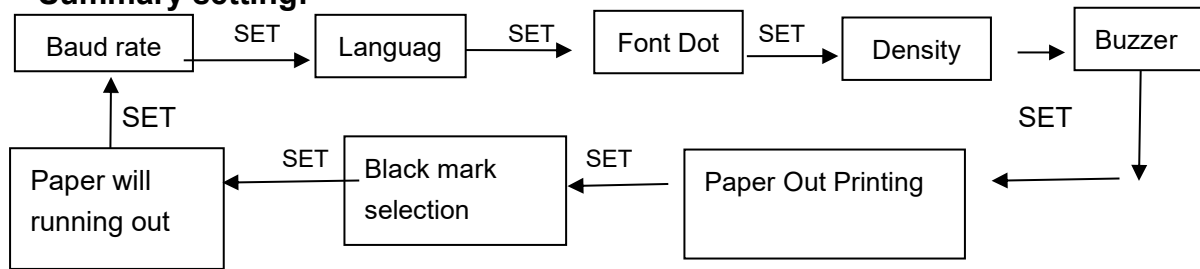


Baud rate:

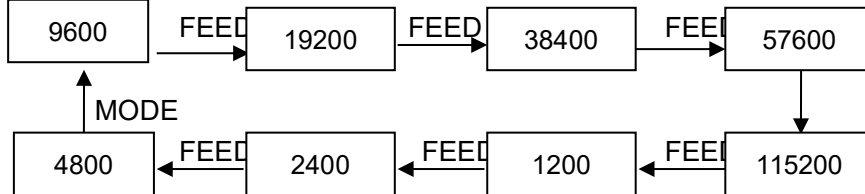


Language:

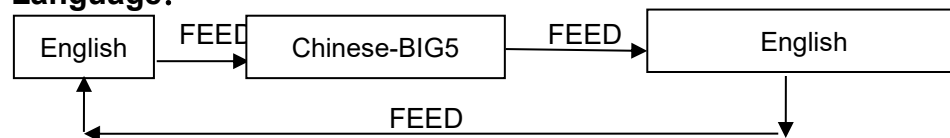


Font:

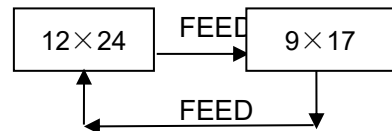


Density:

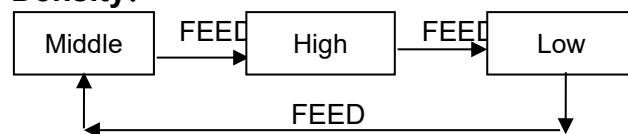


Buzzer:

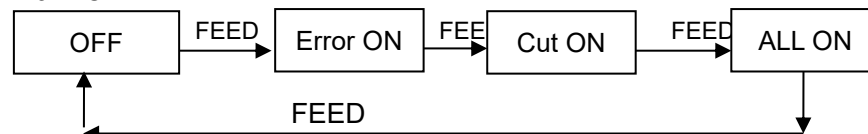

Paper out printing:

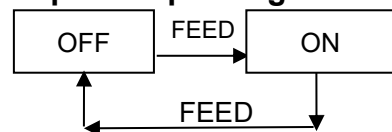

Black mark selection:

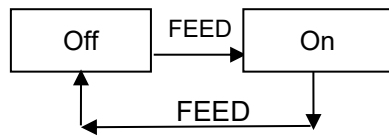

Paper will run out function:

